

B@t-Detektor

Fitting the parts in the case (all versions)

WIR.
SCHAFFEN.
BILDUNG.

Jochen Pfeifer

Jochen.pfeifer@ph-gmuend.de



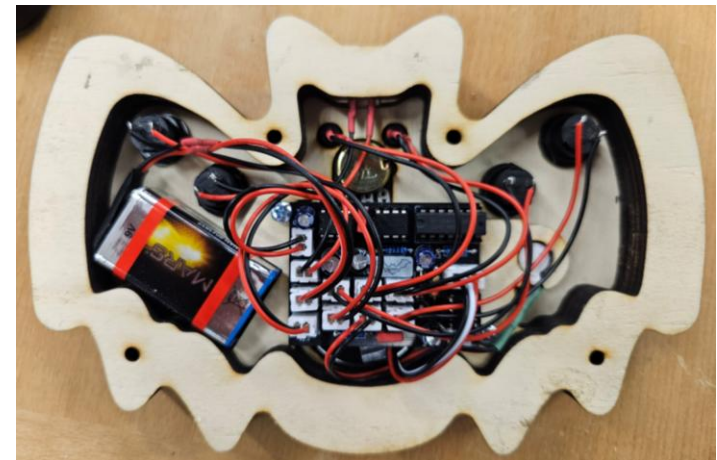


Table of contents

1. Install the speaker
2. Potentiometer
3. Circuit board
4. Ultrasonic sensor
5. Vibration motor
6. LEDs
7. Battery clip
8. Switches
9. Knob for potentiometer
10. Close the case



1. Install the speaker

**Put the speaker in Place.
Glue 2 layers of foam tape on it.**

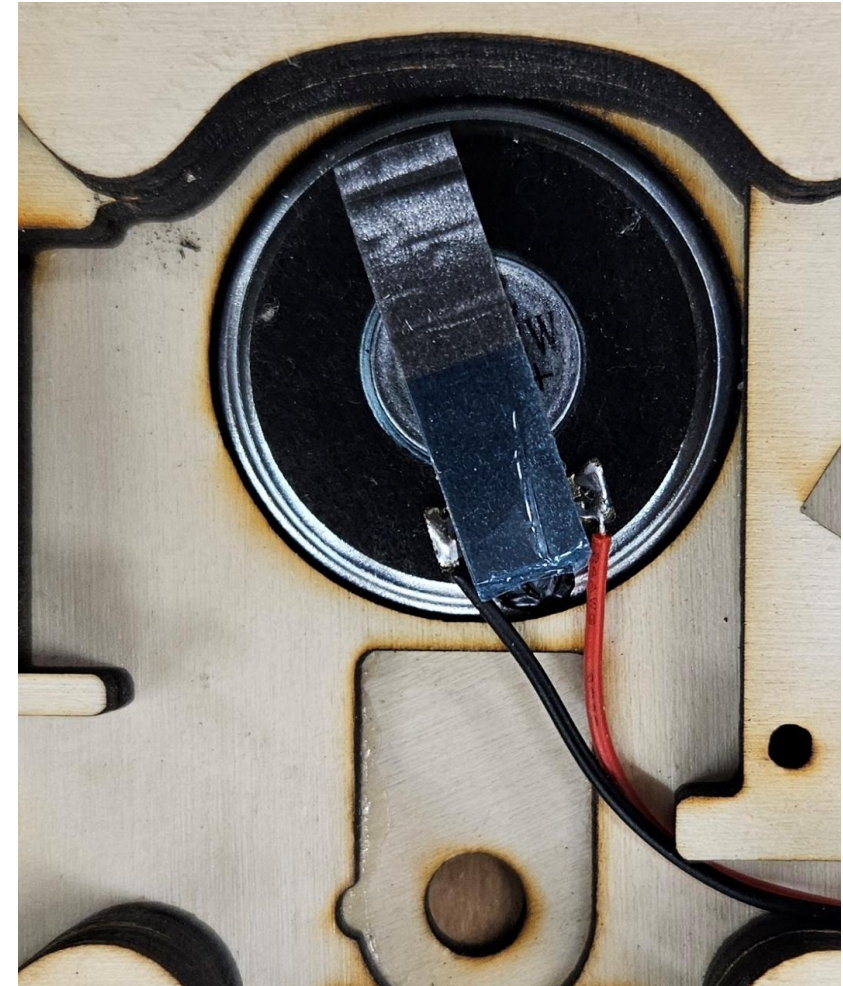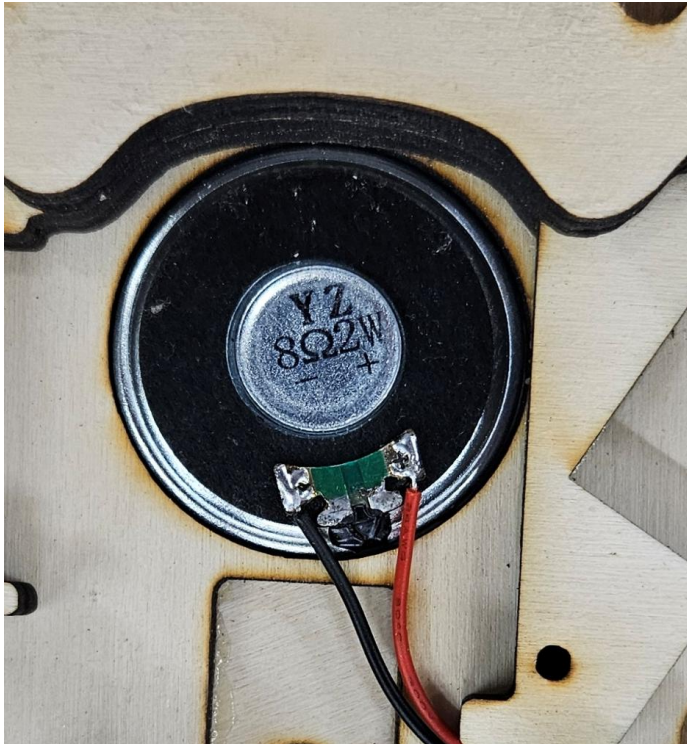

2. Install the potentiometer

**For the laser version... cut the knob first.
Fit it with screw and washer.**

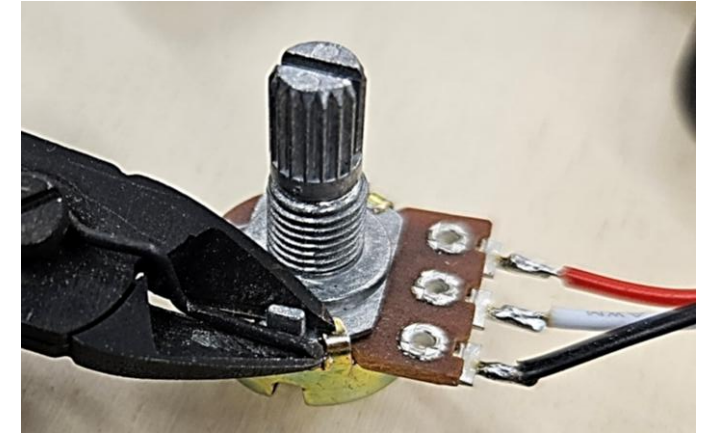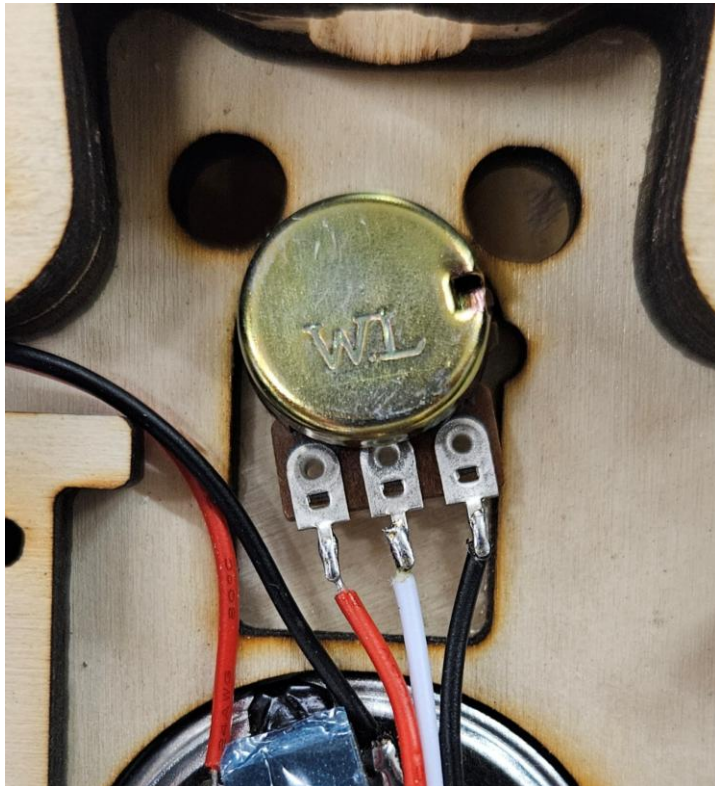



3. Install the circuit board

Use 3,5 x 9,5 mm wood screws.
(For printed version use printed washers.)



4. Install the ultrasonic sensor



**Fit the sensor in place.
For the fdm-version... just click it in place.**

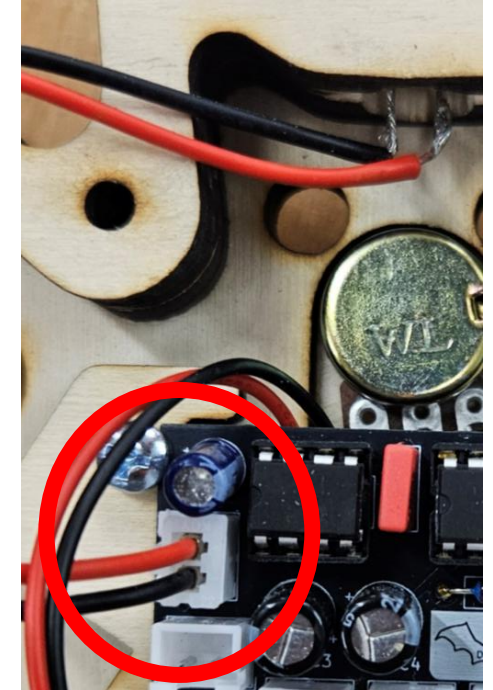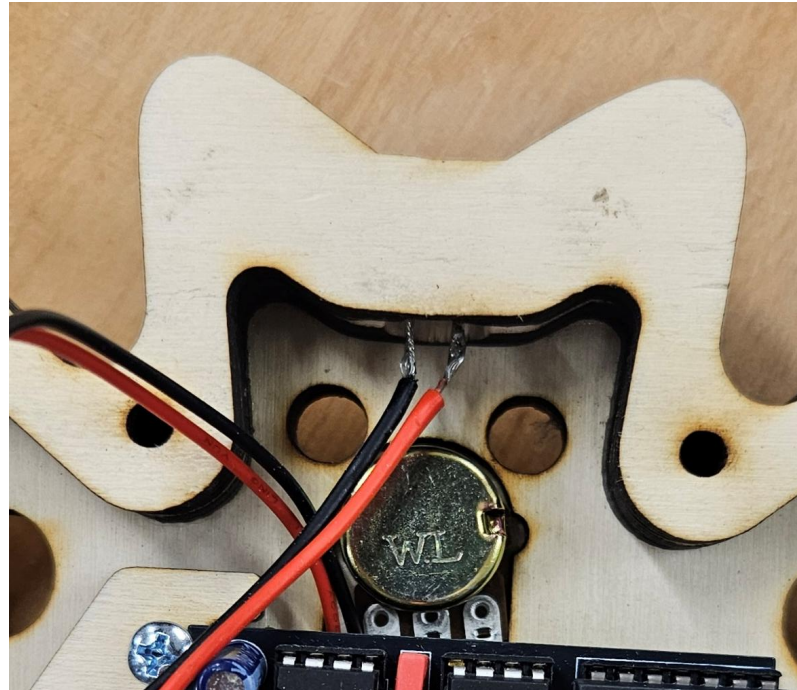

4. Install the ultrasonic sensor




Fit the sensor in place.

For the fdm-version... just click it in place.

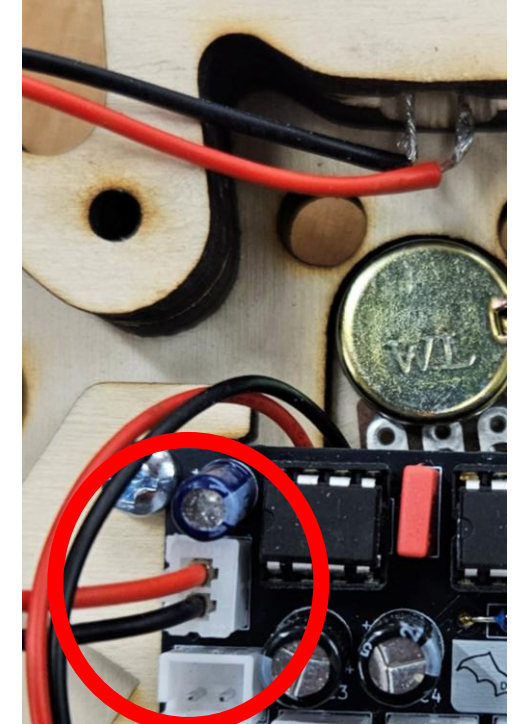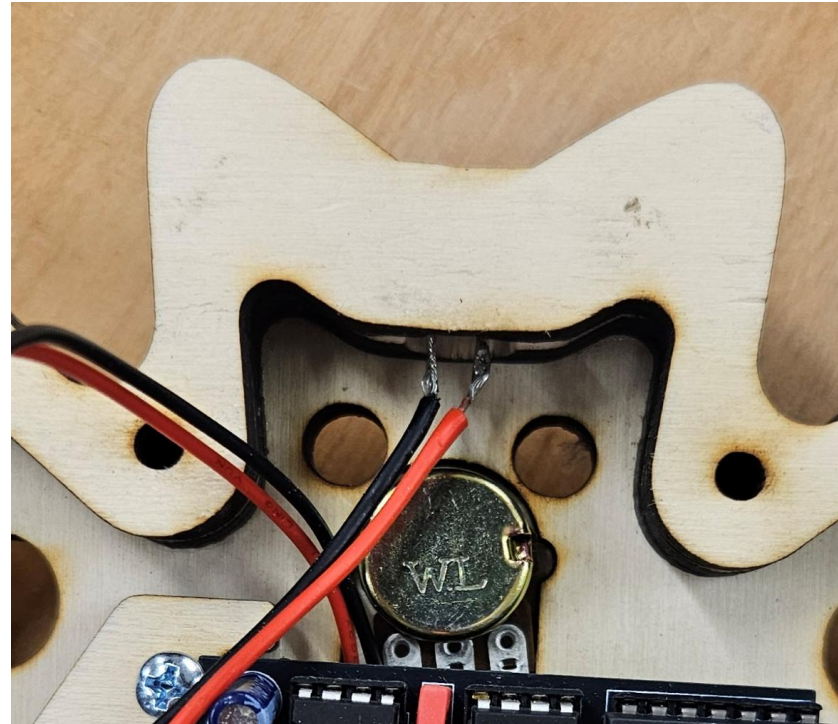


5. Install the vibration motors

Stick the motors in place.
If there is too much clearance, use adhesive tape.

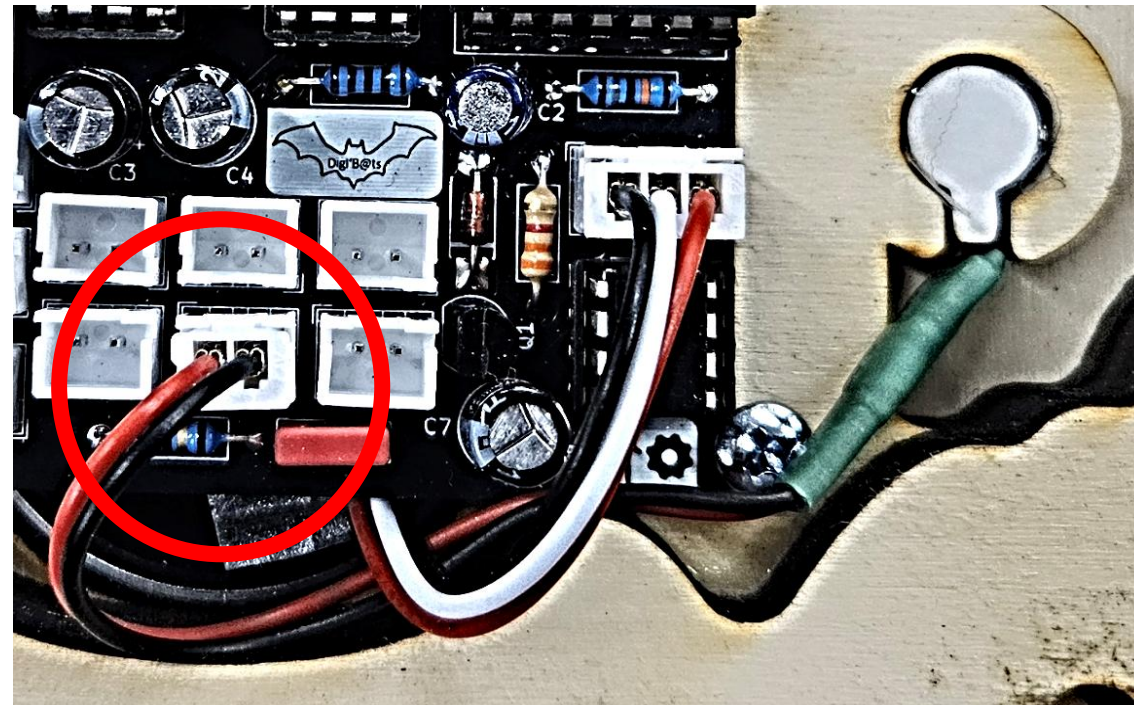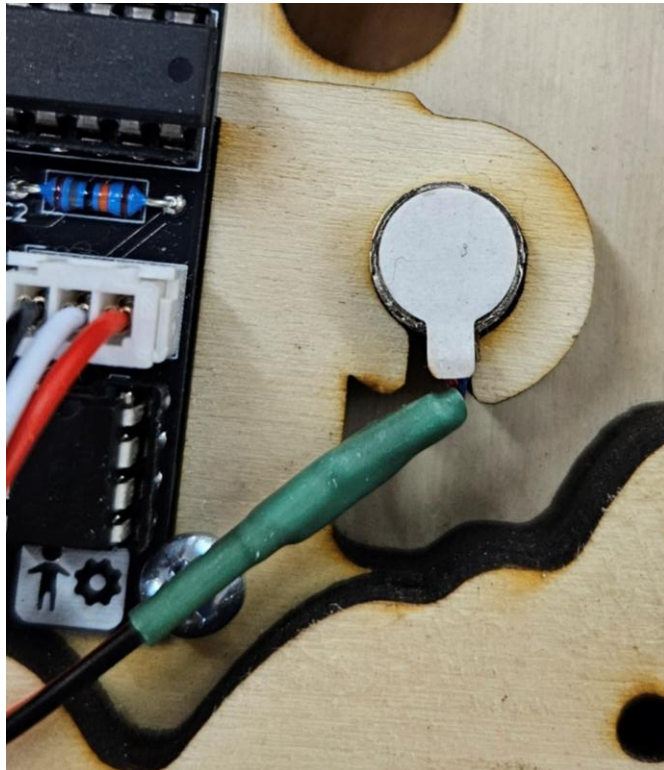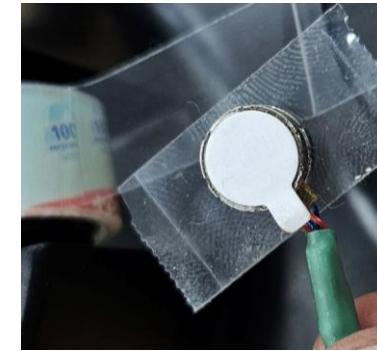



6. Install the LEDs

Press in the LEDs with their sockets.

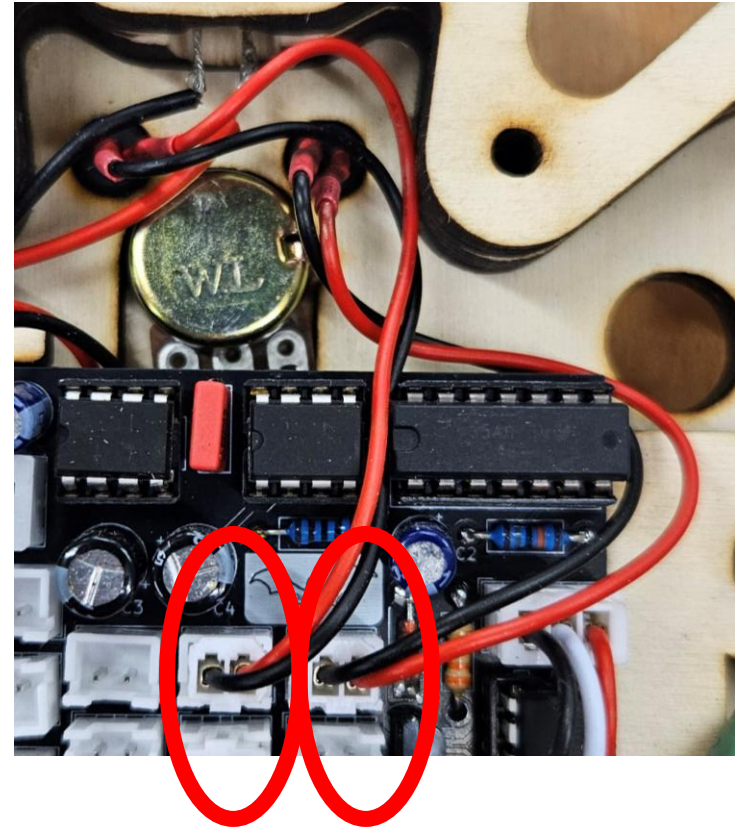


7. Install the battery clip

Use 9 mm of foam tape to hold the battery in place.

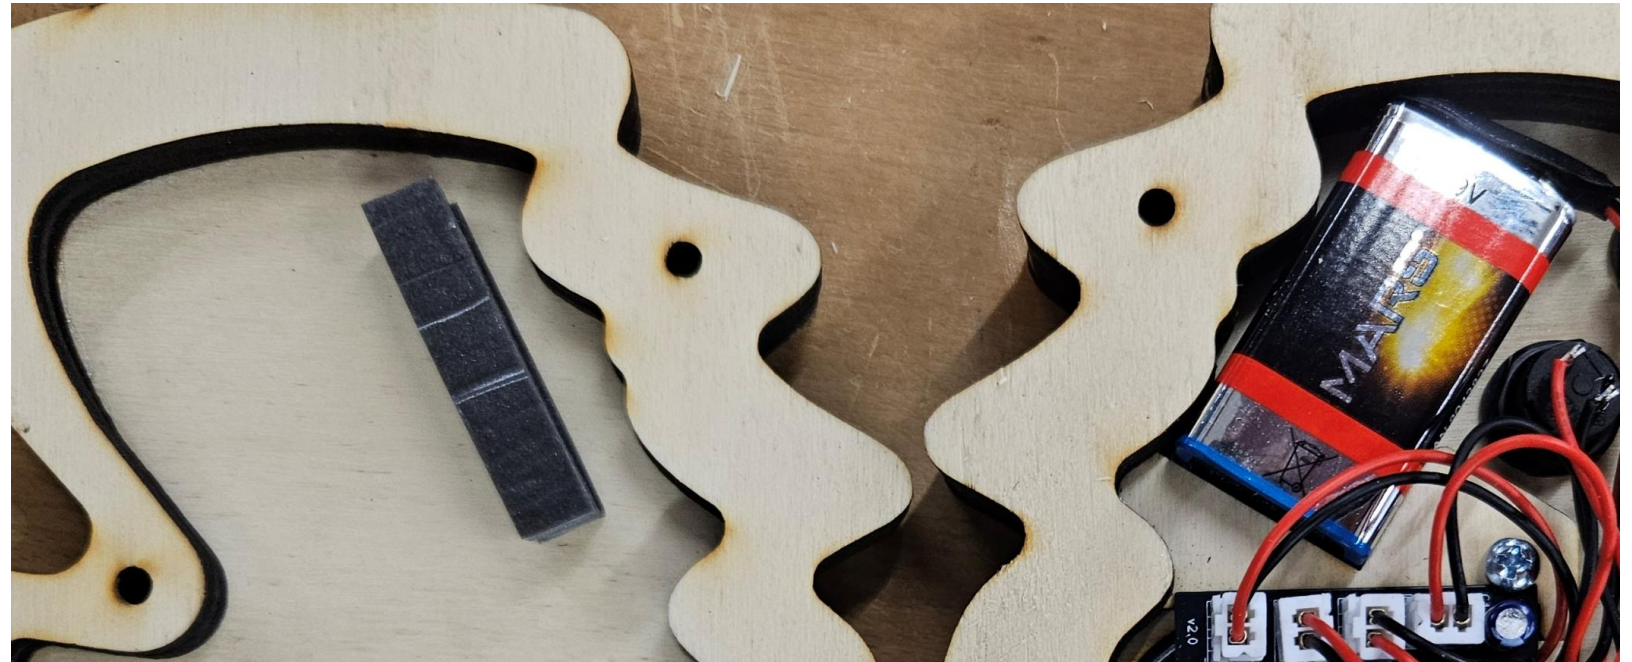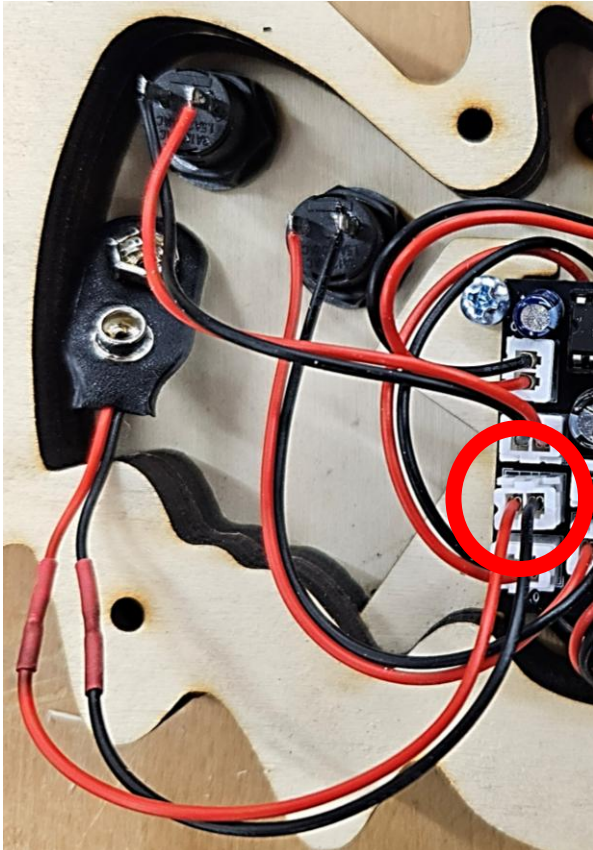

8. Install the switches

Screw in the the switches and attach them.

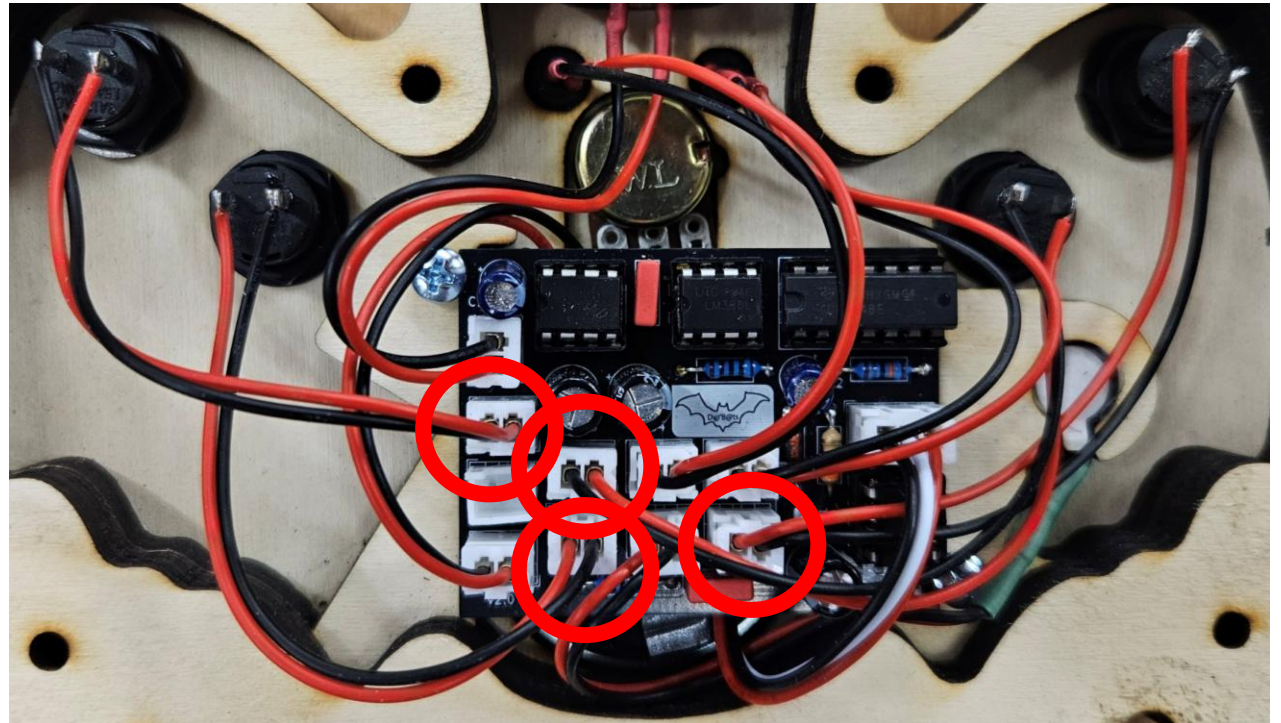

9. Install the knob for the poti

Just press it on the potentiometer.



10. Lock the case

Use 3,5 x 20 wood screws for the fdm case and M4 x 30 for the case made of wood.



You finished the project



Thanks

Jochen Pfeifer

jochen.pfeifer@ph-gmuend.de

PH Schwäbisch Gmünd
Abteilung Technik
Oberbettringer Straße 200
B-Bau / Raum B005
73525 Schwäbisch Gmünd